

 





 
 


 

 


 
 
 

 
 
 
 
 

 

 








**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		SRC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Vol+		VOL +
	Vol-		VOL -
	Mute		MUTE

**Originalfernbedienung    Ersatzfernbedienung**

	P+		CH +
	P-		CH -
	CH List		TV/R
	Content		Shift + VOD
	Menu		MENU
	Guide		-/-- / EPG
	Tools		OPT+
	Info		INFO
	Return		BACK
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Enter		OK
	Red		Red (A)
	Green		Green (B)



