


Originalfernbedienung	Ersatzfernbedienung
	 On
	 SRC / Search
	 OFF
	 Auto / Mode
	 Menu / Info
	 -- / USB
	 Up
	 Down
	 Right
	 Left
	 OK
	 Exit / Lamp
	 Aspect / Re-Sync
	 Hide / Blank
	 K.S. / PIP
	 0 / Lan
	 Mute / Focus

Originalfernbedienung	Ersatzfernbedienung
	 Pict / Freeze
	 Vol +
	 Vol -
	 KS Up
	 KS Down

