



Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	Power		Power
	Scene 1		Red
	Scene 2		Green
	Scene 3		Yellow
	Scene 4		Blue
	CD		1
	MD/CD-R		2
	Tuner		3
	Multi CH In		4
	DVD		5
	DTV/CBL		6
	DVR		7
	V-AUX		8
	Vol-		Vol -
	Vol+		Vol +
	Mute		Mute



 





 



 

Originalfernbedienung Ersatzfernbedienung

	A/B/C/D/E		Exit
	< Preset		<<
	Preset >		>>
	Sleep		Sleep
	Level		Media
	Menu		Menu
	Audio Sel		Dual
	Display		Info
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Night		Guide
	Sur. Decode		Pre Ch
	Straight		Subt





Originalfernbedienung Ersatzfernbedienung

	< Prog		Ch -
	Prog >		Ch +
	Enhancer		Options
	Freq / Text		Text
	EON		TV/R
	Mode-PTY		Eject
	Seek-Start		AV

Originalfernbedienung Ersatzfernbedienung

