










































 

 










 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Preset -		I<< / Preset-
	Preset +		>>I / Preset+
	Stereo		Audio / Lang I/II
	Sleep		Sleep / Timer
	Level		D.Menu / Top
	Test		Text / Goto
	Set Menu		Menu / Home
	Up		Up
	Multi CH In		OK
	Down		Down
	Volume +		Vol+
	Prog +		CH+ / Page+
	Vollume -		Vol-
	Prog -		CH- / Page-
	DVD		2

Originalfernbedienung Ersatzfernbedienung

	CD		3
	VCR		4
	Tuner		6
	V-AUX		7
	MD / CD-R		8
	DTV / CBL		9
	A / B / C / D / E		Yellow / YouTube / Repeat
	Dolby / DTS		SHIFT + LANG I/II Audio / Lang I/II
	Night		SHIFT + TIMER Sleep / Timer
	+		SHIFT + Up
	-		SHIFT + Down
	6.1 / 5.1		SHIFT + 6

