


 


 











 


 
 





 







**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	INFO		Info / Angle
	HDMI CONTROL		Smart / List
	SLEEP		Sleep / Timer
	SCREEN		Picture / Format
	SOURCE		AV / Input / RDS
	PRESETS		Setup / OPT /
	1		1
	2		2
	3		3
	ZOOM/RED/▲		Zoom / Size
	ZOOM/RED/▲		Shift + CH+ /
	ZOOM/RED/▲		Red / Netflix / Search
	4		4
	5		5
	6		6
	REPEAT/GREEN/▼		Shift + CH- /

Page-

**Originalfernbedienung    Ersatzfernbedienung**

	REPEAT/GREEN/▼		Green / APP / Repeat
	7		7
	8		8
	9		9
	ROOT/YELLOW		Yellow / YouTube / Repeat
	RETURN		Back / Return
	0		0
	MENU		Menu / Home
	TITLE/BBLUE		Sound / Title
	TITLE/BBLUE		Blue / Prime Video / Random
	UP		Up
	LEFT		Left
	OK/SELECT		OK
	RIGHT		Right
	DOWN		Down
	P+		CH+ / Page+
	P-		CH- / Page-





**Originalfernbedienung    Ersatzfernbedienung**

	V-		Vol-
	V+		Vol+
	FAV		Fav / Marker / PC
	LANG		Audio / Lang I/II
	SUBTITLE		Subtitle / EQ
	MUTE		Mute / Dimmer
	SWAP/↔	+	Shift + Back / Return
	EPG		Guide / EPG / -/-
	[*] / [..]		D.Menu / Top
	TEXT		Text / Goto
	C		Exit / Cancel / Clear
	DISPLAY		Display / Media
	ANGLE	+	Shift + Info / Angle
	SEARCH MODE	+	Shift + Red / Netflix /
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	PLAY		Play / Slow

**Originalfernbedienung    Ersatzfernbedienung**

	PAUSE		Pause / Step / Freeze
<< button icon"/>	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

