






















 


 













 

 



 


 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	[≡+]/[X]		<< / Tune-
	[≡x]/[··]		>> / Tune+
	[·]/[*]		I<< / Preset-
	[≡◇]/[+]/Wide		Picture / Format
	[≡?]		>>I / Preset+
	[≡i]/Guide		Guide / EPG / -/--
	P<P/SWAP		Fav / Marker / PC
	PP		Back / Return

Originalfernbedienung Ersatzfernbedienung

