








 

 

 



 





 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		SRC
	HDMI		MEDIA
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Mute		MUTE
	CH List		TV/R




 
Originalfernbedienung Ersatzfernbedienung

	Smart Hub		VOD
	Vol+		VOL +
	Vol-		VOL -
	P+		CH +
	P-		CH -
	Guide		-/-- / EPG
	Menu		MENU
	Tools		OPT+
	Info		INFO
	Up		UP
	Enter		OK
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Exit		EXIT
	Red		Red (A)





Originalfernbedienung Ersatzfernbedienung

	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)
	Search		Audio
	P.Size		V-FOR
	Status		WIDE
	AD/Subt.		Subt.
	E-Manual		Shift + - / - / EPG
	History		Shift + P/C / FAV
	<</l<<		Rewind
	Pause		Pause
	>>/l>>		Fast Forward
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung