 

 

 











 
 


 







 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV CH		Fav / Marker / PC
	0		0
	PRE CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Source		AV / Input / RDS
	PR-		CH- / Page-
	Info		Info / Angle
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Return		Shift + Back / Return
	Left		Left
	Enter		OK
	Right		Right
	CH LIST		Smart / List
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



