 






 
 

 

 


 






 




 



 






Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	←○		Shift + Smart / List
	**/Ö		Shift + Display / Media
	*²/♀		Shift + Red / Netflix /
	SOURCE		AV / Input / RDS
	PRESETS		Smart / List
	≡≡		Setup / OPT /
	♪/☺/▣		Display / Media
	SLEEP		Sleep / Timer
	1 . /@		1
	2 abc		2
	3 def		3
	4 ghi		4
	5 jkl		5
	6 mno		6
	7 pqrs		7
	8 tuv		8







Originalfernbedienung Ersatzfernbedienung

	9 wxyz		9
	TV		TV/Radio /
	0		0
	↔		Shift + Back / Return
	TV GUIDE		Guide / EPG / -/-
	[≡]		Text / Goto
	MENU		Menu / Home
	Q.MENU		D.Menu / Top
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	BACK		Back / Return
	→◻←		Picture / Format
	EXIT		Exit / Cancel / Clear
	*FAV		Fav / Marker / PC







Originalfernbedienung Ersatzfernbedienung

	VOL+		Vol+
	MUTE		Mute / Dimmer
	P+		CH+ / Page+
	VOL-		Vol-
	INFO		Info / Angle
	P-		CH- / Page-
	REC		Rec / Rec Mode
	PLAY		Play / Slow
	PAUSE		Pause / Step / Freeze
	STOP		Stop / Hold
	LANG.		Audio / Lang I/II
	<<		<< / Tune-
	>>		>> / Tune+
	[≡]...		Sound / Title
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	BLUE		Blue / Prime Video / Random
---	------	---	-----------------------------

