






Originalfernbedienung Ersatzfernbedienung

 



 

 

 



 

 

 

 



 

 

 







	Power		Power
	Source		AV / Input / RDS
	HDMI		Shift + 0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	PR+		CH+ / Page+
	Vol-		Vol-
	CH List		Display / Media
	PR-		CH- / Page-
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search




Originalfernbedienung Ersatzfernbedienung

	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	Family Story		Picture / Format
	Search		Shift + Red / Netflix /
	3D		Shift + 3
	Support		D.Menu / Top
	P.Size		Zoom / Size
	AD/Subt		Subtitle / EQ
	<</l<<		<< / Tune-
	<</l<<		l<< / Preset-
	Pause		Pause / Step / Freeze
	>>/>>l		>> / Tune+
	>>/>>l		>>l / Preset+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

