






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TTX/MIX |  | Text / Goto |
|  | 0 |  | 0 |
|  | PRE-CH |  | Back / Return |
|  | VOL+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | PR+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|------------------------|
|  | VOL- |  | Vol- |
|  | CH.LIST |  | Display / Media |
|  | CH.LIST |  | Shift + Smart / List |
|  | PR- |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | Smart HUB |  | Smart / List |
|  | Guide |  | Guide / EPG / -/-- |
|  | Tools |  | Setup / OPT / |
|  | Up |  | Up |
|  | Info |  | Info / Angle |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Return |  | Shift + Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Red/A |  | Red / Netflix / Search |



