



 



 

 
 
 
 
 
 
 
 
 
 
 


 







 


 
 
 



 
 

 



 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Sports		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.LIST		List
	Menu		Menu
	Smart HUB		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Green/B	Green		
Yellow/C	Yellow		
Blue/D	Blue		
E-Manual	+ Shift + D. Menu		
Extra	D.MENU D. Menu		
Search	TV/R		
PIC.Size	Format		
Picture	+ Shift + Format		
AD/Subt	Subt		
<</> <<	<<		
Pause	Pause		
>>/>>	>>		
Rec	Rec		
Play	Play		
Stop	Stop		

