 

 



 
 


 



 
 
 


 

 


 
 

 


 



 
 
 
 
 
 
 


 
 



 





 



 
 
 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	I/II/Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Info		Info
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Jump		Media
	FAV.CH		Pre Ch
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	PR-		Ch -
	PR+		Ch +
	Red/D.Setup		Red
	Green/Repeat		Green
	Yellow/Zoom		Yellow
	Blue/Goto		Blue
	[≡+]/DTV/Radio		TV/R



