



 

 

 




 

 

 

 













 


 

















 


 

 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	*		Menu
	Subtitle/Q.Menu		Subt
	Portal		Media
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	FAV		Pre Ch
	Q.View		Sleep
	3D		3D
	Mute		Mute
	Smart		Smart
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	Exit		Exit
	T.Opt.		Options
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right



