

 
 


 

 

 

 

 
 




 










 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡♦]/Wide	 + 	Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[::]/Subtitle		Back






 
Originalfernbedienung Ersatzfernbedienung








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio	 + 	Shift + Yellow
	Blue/Angle		Blue

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Time	 + 	Shift + AV
	Zoom	 + 	Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B	 + 	Shift + Play
	C		Yellow
	Title		Info
	Display	 + 	Shift + Info





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject		
	Menu		Menu		
	Select		Ok		
	Up		Up		
	Down		Down		
	Left		Left		
	Right		Right		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		

