 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	Menu		Menu
	Q.Menu		D. Menu
	World	 + 	Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Back		Back
	Mute		Mute
	i		Info
	Guide		Guide
	[≡]/Text		Text
	Folder		Format
	[-O-]		Subt





Originalfernbedienung Ersatzfernbedienung

	* / O		Sleep
	* / Q		Eject
	Netflix		Media
	Camera-Music-Ph		Options
	YouTube		3D
	[≡]..		List
	Lang		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Rec		Rec
	Pause		Pause
	>>		>>
	<<		<<
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

