




 





 









 

 


 
 

 
 
 

 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	Menu		Menu
	Q.Menu		D. Menu
	World		Shift + Guide

**Originalfernbedienung Ersatzfernbedienung**

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Back		Back
	Mute		Mute
	i		Info
	Guide		Guide
	[≡]/Text		Text
	Folder		Format
	[-O-]		Subt





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 */O	PROG SLEEP Sleep		
 */Q	ZOOM Eject		
 Netflix	APP MEDIA Media		
 Camera-Music-Ph	SETTINGS OPT Options		
 YouTube	ECO 3D 3D		
 [≡]..	DISC NAV LIST List		
 Lang	SOUND DUAL Dual		
 Red	A Red		
 Green	B Green		
 Yellow	C Yellow		
 Blue	D Blue		
 Play	PLAY MODE Play		
 Rec	REC MODE Rec		
 Pause	Pause		
 >>	>>		
 <<	<<		
 Stop	Stop		

