 

 

 

 
 



 

 
 
 



 


 


 
 

 


 




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Smart
	Play		Play
	>>		>>
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	HDMI Link		Media
	Link Menu		Info
	Menu		Menu
	Esc		Exit
	Default		Back

 
 
 

 



 
 
Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	A/V Mute		AV
	Aspect		Format
	Pattern		D. Menu
	Split		Text
	RGBCMY		Subt
	Auto Iris		Dual
	2D/3D		TV/R
	Color Mode		Shift + Format
	Memory		Red
	USB		1
	HDMI1		2
	HDMI2		3





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Wireless HD		4
	Component		5
	Video		6
	PC		7
	User		Green

