


 
 

 




 



 

 

 
 
 

 


 


 
 







Originalfernbedienung Ersatzfernbedienung



 



 

 

 

 

 
 
 

 

 

 

 



 
 
	Power		Power
	Tv/Radio		TV/R
	Subtitle		Subt
	Q Menu		Menu
	Guide		Guide
	[]/Ratio		Dual
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	List		List
	Q.View		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	APP/*		Shift + Media
	Fav		Pre Ch
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Info		Info
	T.Opt		Options
	Smart		Smart
	My Apps		Media
	Back		Back
	Exit		Exit
	Up		Up





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Settings		Shift + Options				
	Rec		Rec				
	Stop/Line Tv		Stop				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

