







 

 





 

 

 
 



 
 
 
 













 


 




 











 
 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Off	 + 	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_/_/--/Del		Guide
	CH List		List
	Mute		Mute
	Source		AV
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Home		Smart
	Magicinfo Player 1		Media
	Info		Info
	Tools		Options
	Exit		Exit
	Return		Back
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red/PC		Red
	Green/DVI		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow/HDMI		Yellow
	Blue/DP		Blue
	Set IR Control		Format
	Unset IR Control		3D
	Lock		Shift + Stop
	Stop		Stop
	Play		Play
	Pause		Pause
	<</ <<		<<
	>>/>>		>>

Originalfernbedienung Ersatzfernbedienung

