




 





 









 

 





 


















 




 









 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Mute		Mute
	CH-List		Guide
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Tools		Options
	Media.P		Media
	Ball		Smart
	Info		Info
	Exit		Exit
	Return		Back
	Menu		Menu
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red		Red
	Green		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Yellow		Yellow
	Blue		Blue
	E-Manual		D. Menu
	Sleep		Sleep
	Micro		Dual
	Stop		Stop
	<</ <<		<<
	Play		Play
	Pause		Pause
	>>/>>		>>

