 
 

 

 

 

 
 

 

 
 
 



 





 
 
 
 
 


 

 
 
 
 

 



 
 


 

 
 


 







 

 
 

 




Originalfernbedienung Ersatzfernbedienung

	Netflix		Media
	Power		Power
	Source		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↔		Pre Ch
	[TV]		TV/R
	Internet		Smart

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	OK		Ok
	Menu		Menu
	Back		Back
	Exit		Exit
	Q.Menu		D. Menu
	Right		Right
	Up		Up
	Down		Down
	Left		Left
	i		Info
	Lang		Dual
	Subt.		Subt
	TXT		Text





Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	You Tube		Eject
	*/Q		Format
	[>]		Shift + Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Rec		Rec
	Stop		Stop
	<<		<<
	Pause		Pause
	>>		>>
	[+]		3D

Originalfernbedienung Ersatzfernbedienung