



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Power Tv	+	Shift + Power
	DVD	+	Shift + 2
	HDD	+	Shift + 7
	Open/Close		Eject / Surround
	AV Input Tv	+	Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR+ Tv	+	Shift + CH+ /
	4		4
	5		5
	6		6
	PR- Tv	+	Shift + CH- /
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	Vol+ Tv		Vol+
	Rec		Rec / Rec Mode
	0		0
	AV Input		AV / Input / RDS
	Vol- Tv		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up		Up
	Menu List		D.Menu / Top
	Left		Left
	Enter		OK





**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Return		Back / Return
	Down		Down
	Display		Display / Media
	EPG		Guide / EPG / -/--
	PR-		CH- / Page-
	PR+		CH+ / Page+
	PR List		Smart / List
	Red/FAV		Red / Netflix / Search
	Green/Repeat		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	O)))/Audio		Audio / Lang I/II
	Title		Sound / Title
	Marker		Fav / Marker / PC

**Originalfernbedienung Ersatzfernbedienung**

	Clear		Exit / Cancel / Clear
	Timeshift		Sleep / Timer
	Tv/DVD		Shift + 1

