

 

 



 











 


 
 





 

 
 
 

 
 
 

 
 
 

 


 


 
 
 

 
 
 
 
 
 


 

 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Quick Access		0
	List		List
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	*		Menu
	Back		Back
	Guide		Guide
	Home/Recents		Info
	Netflix		Shift + Media
	Amazon		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Wheel Up		>>
	Wheel Down		<<
	Source		AV
	Text		Text
	T.Opt/Magic Link		Options
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

