



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[]		Display / Media
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+









Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Source		AV / Input / RDS
	PR-		CH- / Page-
	CH List		Smart / List
	Menu		Menu / Home
	FAV CH		Fav / Marker / PC
	Tools		Setup / OPT /
	Return		Shift + Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	SRS		Sound / Title
	P.Size		Zoom / Size
	Dual/I/II		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	Subt		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

