







 




















 








 


 
 


 




 




 







 







 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Guide	 Guide
 Source	 AV	 Tools	 Options
 1	 1	 Smart Hub	 Smart
 2	 2	 Info	 Info
 3	 3	 Return	 Back
 4	 4	 Exit	 Exit
 5	 5	 Enter	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Red	 Red
 TTX/MIX	 Text	 Green	 Green
 PRE-CH	 Pre Ch	 Yellow	 Yellow
 Mute	 Mute	 Blue	 Blue
 CH List	 List	 Social Tv	 Media
 Menu	 Menu	 3D	 3D

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 TV
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 MENU	 DISP NAV	 INFO
 OK	 OK	 OK	 OK
 UP	 UP	 UP	 UP
 DOWN	 DOWN	 DOWN	 DOWN
 RIGHT	 RIGHT	 RIGHT	 RIGHT
 LEFT	 LEFT	 LEFT	 LEFT
 VOL +	 HOME	 SMART	 CH +
 VOL -	 APP	 MEDIA	 CH -
 1	 2	 3	 3
 4	 5	 6	 6
 7	 8	 9	 9
 GUIDE	 0	 PRE-CH	 PRE-CH
 A	 B	 C	 D
 www.mandis.tv			



