



Originalfernbedienung	Ersatzfernbedienung
Power	Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	Text
PRE-CH	Pre Ch
Mute	Mute
CH List	List
Menu	Menu


 
 

 

Originalfernbedienung	Ersatzfernbedienung
Guide	Guide
Tools	Options
Smart Hub	Smart
Info	Info
Return	Back
Exit	Exit
Enter	Ok
Up	Up
Down	Down
Right	Right
Left	Left
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Social Tv	Media
3D	3D





Originalfernbedienung

Ersatzfernbedienung

	P.Size		Format
	AD/Subt.		Subt
	Search		TV/R
	E-Manual		D. Menu
	Play		Play
	Rec		Rec
	Stop		Stop
	Pause		Pause
	<</ <<		<<
	>>/>>		>>
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Originalfernbedienung

Ersatzfernbedienung

