 

 







 

 





 



 





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Shift + Exit / Cancel / Clear
	0		0
	Repeat/Tv/Radi		Shift + Green / APP /
	I<<		I<< / Preset-
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause/TimeShift		Pause / Step / Freeze
	Guide		Guide / EPG / -/-
	PR+		CH+ / Page+
	Rec		Rec / Rec Mode
	PR List		Smart / List
	PR-		CH- / Page-
	Timer Rec		Sleep / Timer
	Home		Menu / Home
	Music ID		Display / Media
	Info/Display		Info / Angle
	Up		Up
	Left		Left
	Enter		OK



