




 
 

 
 
 


 
 

 
 
 

 
 
 
 
 
 

 
 

 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	LIB		List
	Mute		Mute
	>>		>>
	Play		Play
	<<		<<
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Timers		Sleep
	Guide		Guide
	Back		Back
	Text		Text
	Info		Info
	OK		Ok
	Up		Up
	Down		Down

 
**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	0		0
	AUX		AV
	P<P		Pre Ch
	Menu		Menu
	SUBT.		Subt
	FAV.		Shift + Pre Ch
	PIP-		Media
	PIP		3D
	WIDE		Format
	PIP+		Smart
	Swap		Options

**Originalfernbedienung    Ersatzfernbedienung**