

 

 




 
 
 
 
 

 
 
 

 

 

 

 

 

 



 
 

 

 



 


 

 

 

 

 


 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	www		Smart / List
	Red/▲		Red / Netflix / Search
	Red/▲		Shift + CH+ /
	Green/▼		Green / APP / Repeat
	Green/▼		Shift + CH- /
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	[≡]/Text		Text / Goto
	9		9
	0		0
	Recall		Back / Return
	Up		Up
	Menu		Menu / Home
	Left		Left
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	OK		OK
	Source		AV / Input / RDS
	FAV		Fav / Marker / PC
	Presets		Setup / OPT /
	Sleep		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

V+	Vol+	+ VOL	Vol+
P+	P+	+ CH PAGE	CH+ / Page+
INFO	Info	ANGLE INFO	Info / Angle
Mute	Mute	DIMMER MUTE	Mute / Dimmer
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
V-	Vol-	VOL -	Vol-
P-	P-	CH PAGE -	CH- / Page-

Originalfernbedienung Ersatzfernbedienung

