













 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		Exit
	Zoom		Eject
	Tv System		TV/R
	Source		AV
	Vol-		Vol -
	Vol+		Vol +
	Home		Smart
	Return/X		Back
	Up		Up
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Time Shift		Ch +
	Goto		Ch -
	Rec		Rec
	Play		Play
	Stop		Stop




**Originalfernbedienung Ersatzfernbedienung**

	Timer		Sleep
	Timer		Shift + AV
	Pause		Pause
	Slow/l>		Shift + Play
	I<<		I<<
	Reclist		List
	<<		<<
	>>		>>
	>>		>>
	A-B		D. Menu
	Subtitle		Subt
	Repeat		Text
	Audio		Dual
	Red		Red
	Green/EPG		Green
	Green/EPG		Guide
	Yellow/TTX		Yellow

**Originalfernbedienung Ersatzfernbedienung**

	Yellow/TTX		Shift + Text
	Blue		Blue

