 

 

 







 

 



 

 

 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Rec PVR		Rec / Rec Mode
	PVR List		Smart / List
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	TTX		Text / Goto
	Audio		Audio / Lang I/II
	DTV/VCR		AV / Input / RDS
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Up		Up
	CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Right		Right
	Favourite		Fav / Marker / PC
	CH-		CH- / Page-
	Down		Down
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Goto		Shift + Text /
	7		7
	8		8
	9		9



