
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Top Menu		Menu
	Disc Menu		D. Menu
	Smart TV		TV/R
	Bluetooth		Guide
	Home		Smart
	[≡]		Text
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject
	Return		Back
	III		Options
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	I<		I<<
	>I		>>I
	Vol+		Vol +
	Vol		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
5 JKL	5	5	5				
MNO 6	6	6	6				
7 PQRS	7	7	7				
8 TUV	8	8	8				
WXYZ 9	9	9	9				
0	0	0	0				
SUBTITLE	Subtitle	AD SUBT	Subt				
AUDIO	Audio	SOUND DUAL	Dual				

