 


 




 

 



 
 




 



 

 
 
 
 





 

 
 
 


 
 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Menu		Menu
	3D		3D
	TV Input		TV/R
	AV Input		AV
	i		Info
	Exit		Exit
	APPS		Media
	Home		Smart
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Option		Options
	Return/Back		Back


 

 


 
 
 
 
 



 
**Originalfernbedienung Ersatzfernbedienung**

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Mute		Mute
	Text		Text
	STTL		Subt
	[+]/Aspect		Format
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	?/Help		Dual
	Last View		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung