


 

 
 










 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog		Sleep
	Clear		Exit
	Step		Guide
	Instant Replay		Format
	Instant Skip		3D

Originalfernbedienung Ersatzfernbedienung

	I<</<<		I<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>I/>>		>>I
	Return		Back
	[II]/Menu		Menu
	Info		Info
	Disc Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	A-B/Repeat		AV
	EZ View		Smart
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

AUDIO	Audio	SOUND DUAL	Dual
ANGLE	Angle	SETTINGS OPT	Options
REPEAT	Repeat	REPEAT TEXT	Text

Originalfernbedienung Ersatzfernbedienung

