












 

 






Originalfernbedienung Ersatzfernbedienung

 
















	Power		Power
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Back		Back / Return
	Smart		Smart / List
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	3D		3

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung
Power	 Power
OK	 OK
Up	 Up
Down	 Down
Right	 Right
Left	 Left
Back	 Back / Return
Vol +	 Vol+
Vol -	 Vol-
Home / Smart	 Menu / Home
3D	 +  Shift + 3
Mute	 Mute / Dimmer
P +	 CH+ / Page+
P -	 CH- / Page-
Ratio	 Picture / Format
List	 Smart / List
Q.Menu	 D.Menu / Top

Originalfernbedienung	Ersatzfernbedienung
Subtitle	 Subtitle / EQ
Settings	 Setup / OPT /
>>	 >>I / Preset+
>>	 >> / Tune+
Play	 Play / Slow
AD / PIP	 Sound / Title
<<	 I<< / Preset-
<<	 << / Tune-
Rec	 Rec / Rec Mode
Pause	 Pause / Step / Freeze
Text	 Text / Goto
FAV	 Fav / Marker / PC
Exit	 Exit / Cancel / Clear
Input	 AV / Input / RDS
Blue	 Blue / Prime Video / Random
Yellow	 Yellow / YouTube / Repeat
Stop / Live TV	 Stop / Hold





	Originalfernbedienung	Ersatzfernbedienung
AV Mode		+ Shift + AV / Input / RDS
Green		Green / APP / Repeat
Red		Red / Netflix / Search
0		0
AD		Audio / Lang I/II
TV / PC		+ Shift + Fav / Marker / PC
Search		+ Shift + Red / Netflix /
App		+ Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/--
Info		Info / Angle
Recent		Sleep / Timer
9		9
8		8
7		7
Live Menu		Display / Media
6		6

	Originalfernbedienung	Ersatzfernbedienung
5		5
Q.View		+ Shift + Display / Media
4		4
Live Zoom		Zoom / Size
3		3
2		2
1		1
T.Opt		+ Shift + Setup / OPT / Tools
Energy Saving		Eject / Surround
My APPS		+ Shift + Smart / List

