



 







 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	S		Setup / OPT /
	0		0
	Source		AV / Input / RDS
	Menu/Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tv/Fav/Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	Exit/Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	PR+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	PR-		CH- / Page-
	[++]		Smart / List
	→ /[]←		Display / Media
	[i+]		Info / Angle
	Text		Text / Goto
	>/[▼]		Shift + >> /
	Play/O/I/II		Play / Slow
	<</[≡0]		<< / Tune-





Originalfernbedienung Ersatzfernbedienung














 



 







 






	>>/Subtitle		>> / Tune+
	Open/close/[≡?]		Eject / Surround
	Stop/[≡+]]		Stop / Hold
	<</[≡±]		<< / Preset-
	>> /[≡x]/[O]		>> / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_ Menu/DVD		Menu / Home
	- Exit/Back		Exit / Cancel / Clear
	- Up		Up
	Left		Left
	OK		OK

































Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	Pause / Step / Freeze		Pause / Step / Freeze
	Shift + Play /		Shift + Play /
	Play / Slow		Play / Slow
	<< / Tune-		<< / Tune-
	Shift + << /		Shift + << /
	Shift + >> /		Shift + >> /
	>> / Tune+		>> / Tune+
	Eject / Surround		Eject / Surround
	Stop / Hold		Stop / Hold
	I<< / Preset-		I<< / Preset-
	Shift + I<< / Preset-		Shift + I<< / Preset-
	Shift + >> / Preset+		Shift + >> / Preset+
	>> / Preset+		>> / Preset+





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	- 7		7
	- 8		8
	- 9		9
	0		0
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Pause / Step / Freeze		Pause / Step / Freeze
	Shift + Play /		Shift + Play /
	Play / Slow		Play / Slow
	<< / Tune-		<< / Tune-
	Shift + << /		Shift + << /
	Shift + >> /		Shift + >> /
	>> / Tune+		>> / Tune+
	Eject / Surround		Eject / Surround
	Stop / Hold		Stop / Hold
	Shift + I<< / Preset-		Shift + I<< / Preset-
	I<< / Preset-		I<< / Preset-
	Shift + >>I / Preset+		Shift + >>I / Preset+
	>>I / Preset+		>>I / Preset+

