



 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	PAL/HDMI		TV/Radio /
	Backlight On/Off		Shift + Power
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Target		Red / Netflix / Search
	Edit		Shift + Setup / OPT / Tools
	Repeat		Green / APP / Repeat
	Subtitle		Subtitle / EQ
	Video Out		Shift + 4
	i/Display		Display / Media
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Photo Digest		D.Menu / Top
	Photo Mode		Shift + Zoom /
	Home		Menu / Home
	Slide Time		Shift + Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Rotate		Shift + Text /
	Left		Left
	Enter		OK
	Right		Right
	CH Sub Audio		Shift + Audio / Lang I/II
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Source		AV / Input / RDS
	4:3/16:9		Picture / Format
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
+10	+10	GUIDE EPG	Guide / EPG / -/--
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
0	0	HDMI - BAT 0	0
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
Time Search	Time Search	TIMER SLEEP	Sleep / Timer
EQ On/Off	EQ On/Off	SURROUND	Eject / Surround
EQ Type	EQ Type	SHIFT + EQ SUBTITLE	Shift + Subtitle / EQ
Vol-	Vol-	VOL -	Vol-
Vol+	Vol+	VOL +	Vol+
Movie	Movie	SHIFT + LIST SMART	Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung

Music	Music	LIST SMART	Smart / List
Photo	Photo	SHIFT + FORMAT PICTURE	Shift + Picture / Format
File	File	GOTO TEXT	Text / Goto

