 



 

 
 
 


 







 
 
 
 
 
 

 
 
 

 




 
 
 


 
 



 



 



 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Power |  | Power |
|  | Tv-Out |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Subtitle |  | Subt |
|  | Audio |  | Dual |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Up/l<< |  | Ch + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | Dn/>>>I |  | Ch - |
|  | Menu |  | Menu |
|  | >> |  | >> |
|  | << |  | << |
|  | Player |  | Yellow |
|  | Stop |  | Stop |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Mute |  | Mute |
|  | Zoom |  | Shift + Eject |
|  | Repeat |  | Text |
|  | Setup |  | Options |
|  | Display |  | Shift + Info |
|  | Rotate |  | Back |



