





 

 
 
 
 








 

 

 





 

 

 







 

 





 

 












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	AV		AV / Input / RDS
	Mute		Mute / Dimmer
	16:9		Picture / Format
	Zoom		Zoom / Size
	Subt.		Subtitle / EQ
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	FAV		Fav / Marker / PC
	4		4
	5		5
	6		6
	EPG		Guide / EPG / -/--
	7		7
	8		8



**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	Info		Info / Angle
	Back		Back / Return
	0		0
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	PR-		CH- / Page-
	PR+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung   Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TXT		Text / Goto
	♪		Sound / Title
	[ ]		Smart / List
	Swap		Sleep / Timer
	PIP		D.Menu / Top
	Pos		Setup / OPT /
	Size		+  Shift + Zoom /
	Freeze		Pause / Step / Freeze

Originalfernbedienung   Ersatzfernbedienung