

 



 



 



 



 
 
 
 
 

 
 

 








 


 



 
 
 
 

 









 
 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	Vol+		Vol +
	Vol-		Vol -
	[i+]		Info
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Netflix		Media
	Zoom		Eject
	Text		Text
	Subtitle		Subt
	[>]		TV/R
	[<>]		Format



