




 





 
 



 

 


 

 



 








 









 


 


 

 








 

 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Info |  | Info |
|  | List |  | List |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | CH+ |  | Ch + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | CH- |  | Ch - |
|  | Mute/SAP |  | Mute |
|  | Home |  | Smart |
|  | */Setting |  | Menu |
|  | 3D |  | 3D |
|  | Exit |  | Exit |
|  | Back |  | Back |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Wheel Up |  | >> |
|  | Weel Down |  | << |
|  | OK |  | Ok |
|  | [!] |  | Options |
|  | Red |  | Red |
|  | Green |  | Green |



