




 













 

 

 

 





























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Eject/Tv Audio		Eject / Surround
	4		4
	5		5
	6		6
	Recall/Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Tv Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVD Menu		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Sound		Sound / Title
	CH-		CH- / Page-
	Vol-		Vol-
	Pic		Picture / Format
	CH+		CH+ / Page+
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	DVD Setup		Setup / OPT /
	Back/Tv/Radio		Shift + Back / Return
	Text		Text / Goto



