


































 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Info		Info / Angle
	EPG		Guide / EPG / -/--

















 
 

 

 

 



Originalfernbedienung Ersatzfernbedienung

	Prog+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	Prog-		CH- / Page-
	Left		Left
	Up		Up
	OK		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down
	Menu		Menu / Home
	Fav		Fav / Marker / PC
	Format		Shift + Picture / Format
	Texte		Smart / List
	Subtitle		Subtitle / EQ
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	Mix		Shift + Text /
	Reveal		Pause / Step / Freeze
	Index		Play / Slow
	Subpage		Rec / Rec Mode
	TXT		Text / Goto
	Cancel		Exit / Cancel / Clear
	Size		Zoom / Size
	Hold		Stop / Hold
	P Mode		Picture / Format
	S Mode		Sound / Title
	MTS		Display / Media
	3DNR		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

