


 

 



 

 

 

 

 

 

 
 

 
 




 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Radio/Tv		TV/R
	Internet		Smart
	CH/Page+		Ch +
	Skype		List
	CH/Page-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Exit		Exit
	Return		Back
	Option		Options
	i/Status		Info
	Pause/Pause Tv		Pause
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Play/x1.3		Play
	Stop		Stop
	Function Menu		Menu
	Direct Navigator/PopUp		Shift + Menu
	OK		Ok
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right/II>		Right
	<II/Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Audio		Dual
	Text		Text
	STTL		Subt
	Prog/Check		Shift + Smart
	Setup		Sleep
	Display		Shift + Info
	Chapter		Shift + Pre Ch
	Time Slip		D. Menu
	Del		Format
	Manual Skip -10s		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	Manual Skip +60s		3D
	AV Input Tv		AV
	Power Tv		Shift + Power
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Drive Select		Media

