 

 

 

 

 

 

 
 
 

 

 

 
 
 
 
 


 
 




 

 

 

 
 



 

 
 

 
 
 
 
 

 



 
 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CH/Page+		Ch +
	CH/Page-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Back		Back
	Setup		D. Menu
	Info		Info
	CBL/SAT		1
	Option		Options
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6

Originalfernbedienung Ersatzfernbedienung

	TV/Audio		7
	AUX2		8
	Tuner		9
	iPod/USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Online Music		Dual
	Internet Radio		TV/R
	Eco		Shift + 3D
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	I<</Tune-		I<<
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow











 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CH/Page+		Ch +
	CH/Page-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Back		Back
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	I<</Tune-		I<<

Originalfernbedienung Ersatzfernbedienung

	1 Quick Select		Text
	2 Quick Select		AV
	3 Quick Select		Format
	4 Quick Select		3D
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV/Audio		7
	AUX2		8
	Tuner		9
	iPod/USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Online Music		Dual



