







 




 
 
 
 
 
 

 
 
 

 



 



 
 
 
 

 
 
 
 
 
 

 

 
 


 


 

 




 


 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	HDMI/Control		Smart
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Red/Zoom/↑ ↓		Red
	Green/Repeat/↓		Green
	Yellow/Root		Yellow
	Blue/Title		Blue
	Screen		Format
	Lang		Dual
	Subtitle		Subt

**Originalfernbedienung Ersatzfernbedienung**

	Internet/PIP		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Source		AV
	OK		Ok
	Up		Up
	Down		Down





**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Mute		Mute
	Return		Back
	Swap		Pre Ch
	FAV		Shift + Pre Ch
	EPG		Guide
	Sleep		Sleep
	Search Mode		Shift + AV
	Ball/Angle		Options
	Display		Shift + Info
	Presets		TV/R

**Originalfernbedienung Ersatzfernbedienung**