 




 
 


 

 

 

 

 





 

 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡+]/-/-		Guide
	PRE-CH		Pre Ch
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	[≡..]/Source		AV
	Menu		Menu
	[≡]/[/≡]/TTX/MIX		Text
	[≡?]/Info		Info
	Exit		Exit
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red/Dual		Red
	Green/Sound		Green
	Yellow/P.Size		Yellow
	Blue/P.Mode		Blue
	[≡◇]/Auto Prog		Options
	[≡o]/ADD/DEL		Subt



