 

 
 
 



 

 
 
 

 

 
 

 


 

 

 
 
 

 



 
 
 
 
 
 
 
 
 
 
 
 
 



 
 
 
 





 
 
 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Text		Text
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	TV/R		TV/R
	Exit		Exit
	Menu		Menu
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	APP / SAT		Media
	EPG		Guide
	List		List
	Audio		Dual





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Sub		Subt
	Pup		>>I
	Info		Info
	Zoom		Eject
	Pdw		I<<
	FAV		Pre Ch
	FAV+		>>
	FAV-		<<

