
 
 
 
 
 







 
 







 





 

 
 






Originalfernbedienung Ersatzfernbedienung


 
 



 
 
 
 


	Standby		Power
	STB PWR		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Quick Access		0
	List		List
	AD		Subt
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	Mute		Mute
	Micro/Q		Format
	Home/Recents		TV/R
	*		Menu
	Back/Exit		Back
	Guide		Guide
	Mouse Up		>>
	Mouse Down		<<
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Netflix		Shift + Media
	Amazon		Media
	Source		AV





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Text		Text				
	T.Opt/Magic Link		Options				
	Info		Info				
	Play		Play				
	Pause		Pause				
	Live		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

